

MANUAL DE INSTRUCCIONES CORTADORA DE CABELLO ED-1187

ESTIMADO CLIENTE


Felicitaciones por su compra!

Por favor lea cuidadosamente este manual, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com

WWW.REMIERMUNDO.GOM



DESCRIPCIÓN

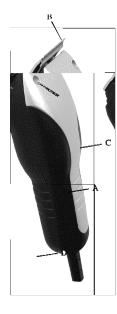

- A. Cuchillas acero de carbón.
- B. Interruptor Encender/Apagar
- C. Nivel de la cuchilla
- D. Cable de energía

INSTRUCCIONES DE SEGURIDAD

CUIDADO: No use este aparato cerca de lugares con agua como cerca de la bañera, el lavamanos u otros recipientes. Este aparato no debe ser usado por niños o por personas con alguna discapacidad sin que sean supervisados. Debe vigilar a los niños para asgurarse que no juegen con el aparato.

Mantenga este aparato alejado del agua. No use el aparato cuando se esté bañando, ni en habitaciones húmedas o cerca de objetos que contengan agua. No use el aparato con las manos húmedas, no lo sumerja en ningún líquido, no deje que le caiga agua ni que se humedezca. Desenchufe el aparato cuando no lo use.

Pagina 1



PELIGRO:

- No deje caer el aparato a ningún líquido. En ese caso, desenchúfelo de inmediato.
- No use el aparato mientras se esté bañando o duchándose.
- No deje el aparato donde pueda caerse al lavamanos o la tina. No lo coloque ni lo deje caer al agua u otro líquido.
- Desenchufe el aparato inmediatamente después de usarlo. Desenchufe el aparato antes de limpiarlo, guardarlo o desarmarlo.

ATENCIÓN: Para evitar el riesgo de choques eléctricos, quemaduras, incendios u otros daños personales, siga estas recomendaciones:

- · No deje el aparato sin vigilancia mientras esté enchufado.
- Cuando este aparato esté siendo usado por usado por niños o por personas con alguna discapacidad, debe vigilarse de cerca.
- Este aparato debe usarse sólo para los propósitos que se describen en este manual. No use piezas no recomendadas por el fabricante.
- No use este aparato si el cable de energía o el enchufe está dañado, si no funciona correctamente o si se ha caído, averiado o si lo ha dejado caer al aqua.
- Mantenga el cable de energía alejado de superficies calientes.
- No introduzca ningún objeto a través de los orificios del aparato. No lo use en exteriores ni cerca de aerosoles u otros productos que consuman oxígeno.
- No use este aparato si el cable de energía, el enchufe o los conectores se han dañado ya que puede ocasionar un corto circuito.
- Para apagar el aparato coloque el interruptor en la posición "0" y luego desenchufe el cable de energía del tomacorriente.
- No toque las cuchillas cuando estén en movimiento.
- No enrede ni doble el cable mientras esté usando el aparato.
- Si el cable llegase a enredarse durante el uso del aparato, deje de usarlo y desenchúfelo de inmediato.
- Si el cable de energía se daña debe ser remplazado por el fabricante, el servicio técnico o por un técnico calificado para evitar posibles daños.

INSTRUCCIONES DE USO

- · Quite el protector plástico que cubre las cuchillas.
- Coloque el interruptor en la posición "ON".
- Cuando termine de usar el aparato, apáquelo y desenchufe el cable de energía del tomacorriente.
- Limpie los cabellos que quedaron en las cuchillas usando la brocha de limpieza o un cepillo de dientes en desuso. Para limpiar el exterior del aparato use un paño suave y seco.

ALMACENAMIENTO

Vuelva a colocar el protector plástico de las cuchillas, envuelva el cable de energía y asegúrelo con una liga. Guarde el aparato en un lugar seco.

WWW.PREMIERMUNDO.COM



MANTENIMIENTO

El motor del aparato cuenta con una lubricación permanente desde la fábrica. Además de la limpieza recomendada, el aceitado o el remplazo de las cuchillas, todas las demás reparaciones deben ser realizadas por un técnico calificado. Si el cable está enredado extiéndalo antes de usar el aparato. Si necesita limpiar el aparato desenchúfelo y limpie el exterior con un paño.

TORNILLO DE AJUSTE DE POTENCIA

El tornillo de ajuste de potencia se encuentra en el costado derecho del aparato y le permite modificar la potencia del cortador. Este tornillo ha sido ajustado en la fábrica, pero si necesita modificar la potencia del corte o si el aparato produce mucho ruido puede ajustarlo. Use un destornillador o una moneda delgada para girar el tornillo en sentido horario hasta que el ruido aumente. Para disminuir el ruido gire el tornillo en sentido anti-horario y la potencia irá disminuyendo poco a poco.

AJUSTE DE LAS CUCHILLAS Y LAS PEINETAS


No todas las peinetas tienen cuchillas ajustables. Si tiene una peineta ajustable siga estas instrucciones:

Las peinetas ajustables permiten variar la longitud del corte sin agregar otros accesorios. Para ajustar las peinetas use el control de nivel para subir las cuchilla inferior y obtener un corte más fino o bajarla para obtener un corte más largo. El corte fino es útil para la zona de la nuca y el corte largo es útil para los costados de la cabellera. Puede variar el nivel de corte durante el funcionamiento del aparato. Los accesorios deben usarse con las peinetas ajustables según las instrucciones sobre los accesorios.

USO DE ACCESORIOS

Para colocar un accesorio al aparato, asegúrese de tener el borde frontal de las cuchillas en las guías del peine, deslice el accesorio sobre la peineta usando el protector para las cuchillas. Coloque la palma de la mano en el protector de las cuchillas y empuje la peineta hacia las cuchillas. Si no puede hacerlo con facilidad, coloque una gota de aceite en la parte interior de la peineta. Si no dispone del protector de las cuchillas, tenga cuidado mientras presione la peineta con la palma de su mano.

DIAGRAMA DEL CIRCUITO

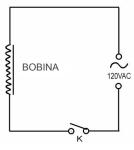



INSTRUCTION MANUAL
HAIR CLIPPER
ED-1187


DEAR CUSTOMER

Congratulations for your purchase!
Please read this manual carefully, and keep it for future reference.
If you need extra support, please write to info@premiermundo.com

WWW.PREMIERMUNDO.GOM



OPERATING INSTRUCTIONS

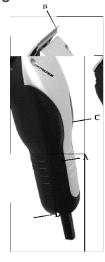

Appliance Features:

- A High carbon Steel Blades
- B On/Off Switch
- C Blade Adjustment Lever
- D Power Screw

The appearance of this appliance may differ from the illustration above. SAVE THESE INSTRUCTIONS

Read all instructions before using.

Important Safety Instructions

WARNING: Do not use this appliance near water contained in bath-tubs, basins or other vessels. This appliance is not intended for use by your children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Keep this appliance away from water. Never use appliance while bathing, in damp rooms, or over a hand basin or vessel filled with water. Neither should the appliance be used with wet hands or immersed in water, held in running water, or allowed to become wet(e.g. as in splashing). Always unplug appliance when not in use.

DANGER- To reduce the risk of electric shock:

- 1. Do not reach for an appliance that has fallen into water. Unplug immediately.
- 2. Do not use while bathing or in a shower.

Pagina 1

- 3. Don not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- 4. Always unplug this appliance from electrical outlet immediately after using. Unplug this appliance before cleaning, putting on or taking off parts.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1. An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged or immersed in water.
- 5. Keep the cord away from heated surface.
- 6. Never drop or insert any object into any opening. Do not use outdoors or operate where aerosol (spray) products are being used where oxygen is being administered.
- Do not use this appliance with a damaged cord or broken comb or blade, as cut or scratched skin may occur.
- 8. To disconnect, turn all controls to "O", then remove plug from outlet.
- 9. Do not wrap the cord around the unit when storing.
- 10. Avoid contact with moving blades.
- 11. Avoid tangling or kinking the cord while clipping or trimming.
- 12. Should the cord become tangled or kinked, stop clipping or trimming and straighten the cord.
- 13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Operating the Clipper

- Remove the plastic blade guard covering the teeth of the blades.
- Push the "O/I" switch to turn the clipper to the "ON" position.
- When finished clipping, turn the clipper off and unplug from the electrical outlet.
- Clean the hair clippings from the blades using the clipper brush or an old toothbrush. Wipe the
 housing with a clean, dry cloth.

Storage

Replace the blade guard. Coil the electric cord and secure with a twist fastener. Store clipper in a dry location.

Maintenance

The motor of your clipper has been permanently lubricated at the factory. Other than the recommended cleaning, oiling of the blades and blade replacement, all maintenance must be performed by repair service personnel. If the cord becomes twisted, untwist prior to use. If cleaning becomes necessary, disconnect the exterior with a damp cloth.

Power Screw Instruction

The power screw is available on the right side of the clipper. It permits you to adjust the cutting power. This screw was adjusted before leaving the factory. However, if the cutting performance is not perfect or the unit becomes too noisy, you may need to re-adjust it. To adjust while running, use a screwdriver or a

Pagina 2

WWW.PREMIERMUNDO.COM



thin coin to turn clockwise direction until the noise level increases, to minimize the noise, slowly turn the power screw counterclockwise. This is the maximum power setting.

Blade Adjust - Adjustable clipper

Not all clippers have an adjustable blade. If you have a deluxe adjustable clipper, the following instructions apply to your clipper. The adjustable clipper has a blade that enables you to cut hair at various lengths without attachments. To adjust, use thumb adjustment lever to move lower blade up for FINE cutting and down for COARSE cutting. Fine setting cuts hair very short for neck, etc. coarse setting leaves hair longer for sideburns, etc. clipper may be adjusted while running. Attachments may be used with the adjustable clipper by following the guide attachment instructions.

Guide Attachments

To attach your new comb attachments to clipper, be sure to get the front edge of the blade started in the track of comb. When slipping on combs, use your blade guard over the teeth of the comb. Press palm of hand against blade guard and push comb into blade. If there is resistance, place a drop of oil on inner side of comb. If blade guard is not available, precaution should be taken when pressing palm of hand against comb.

Circuit Diagram

